

Display Operation

Technical manual






 







Split - Full Inverter heatpump



34-180501 / 34-180502

Symbol function instruction




Icon	Designation	Function
	Cooling symbol	It will display during cooling (there is no limit to startup & shutdown, and it is optional when the unit is cooling-only unit or heating-and-cooling unit).
	Heating symbol	It will display during heating (there is no limit to startup & shutdown, and it is optional when the unit is heating-only unit or heating-and-cooling unit).
	Automatic symbol	It will display under the automatic mode (there is no limit to startup & shutdown, and it is optional when the unit is heating-and-cooling unit).
	Defrosting symbol	It will display in the defrosting process of the unit.
	Silent symbol	It shows three blades when you turn on the silent fuction, otherwise it would normally show six blades.
	Timing symbol	It will display after the user sets the timer, and multiple timing intervals can be set.
	Water outlet symbol	When the auxiliary display area displays the water outlet temperature, the light is on.
	Water inlet symbol	When the main display area displays the water inlet temperature, the light is on.
	Locking key symbol	When the keyboard is locked, it is on.
	Fault symbol	In case of unit fault, the light is on-
	Degrees Celcius symbol	When the main display area or auxiliary display area displays degrees Celcius (°C),it is on.
	Degrees Fahrenheit symbol	When the main display area or auxiliary display area displays degrees Fahrenheit (°F), it is on.
	Setting symbol	When the parameter is adjustable, it is on.

Parameter setting


Password interface



 Long press the "mode key" to enter password interface




Press "on-off key" to return to the main interface

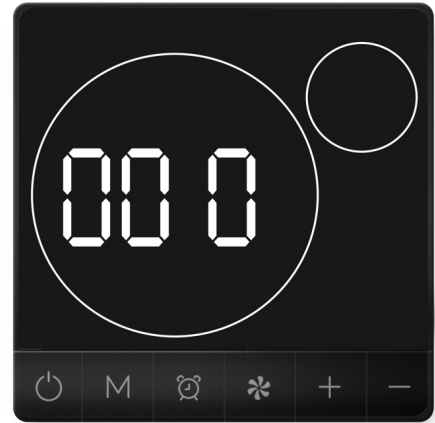

Press "on-off key" to return to main interface




Press "on-off key" to return to the main interface

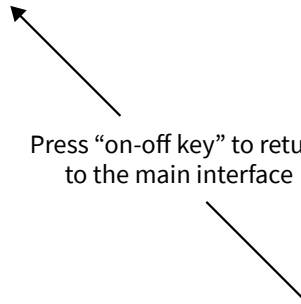



Press "mode key" to enter 10 digit setting



Press "+" or "-" button to set 1 digit value

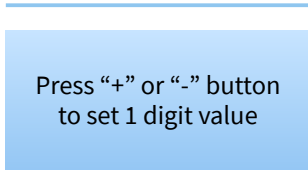

 
Press "+" or "-" button to set 10 digit value

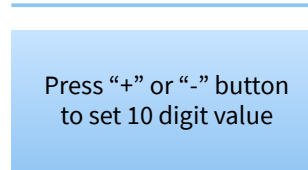

Press "mode key" to enter 1 digit setting

Parameter setting

1. Enter "066" password to set advance parameter.
2. Enter "022" password to set user parameter.

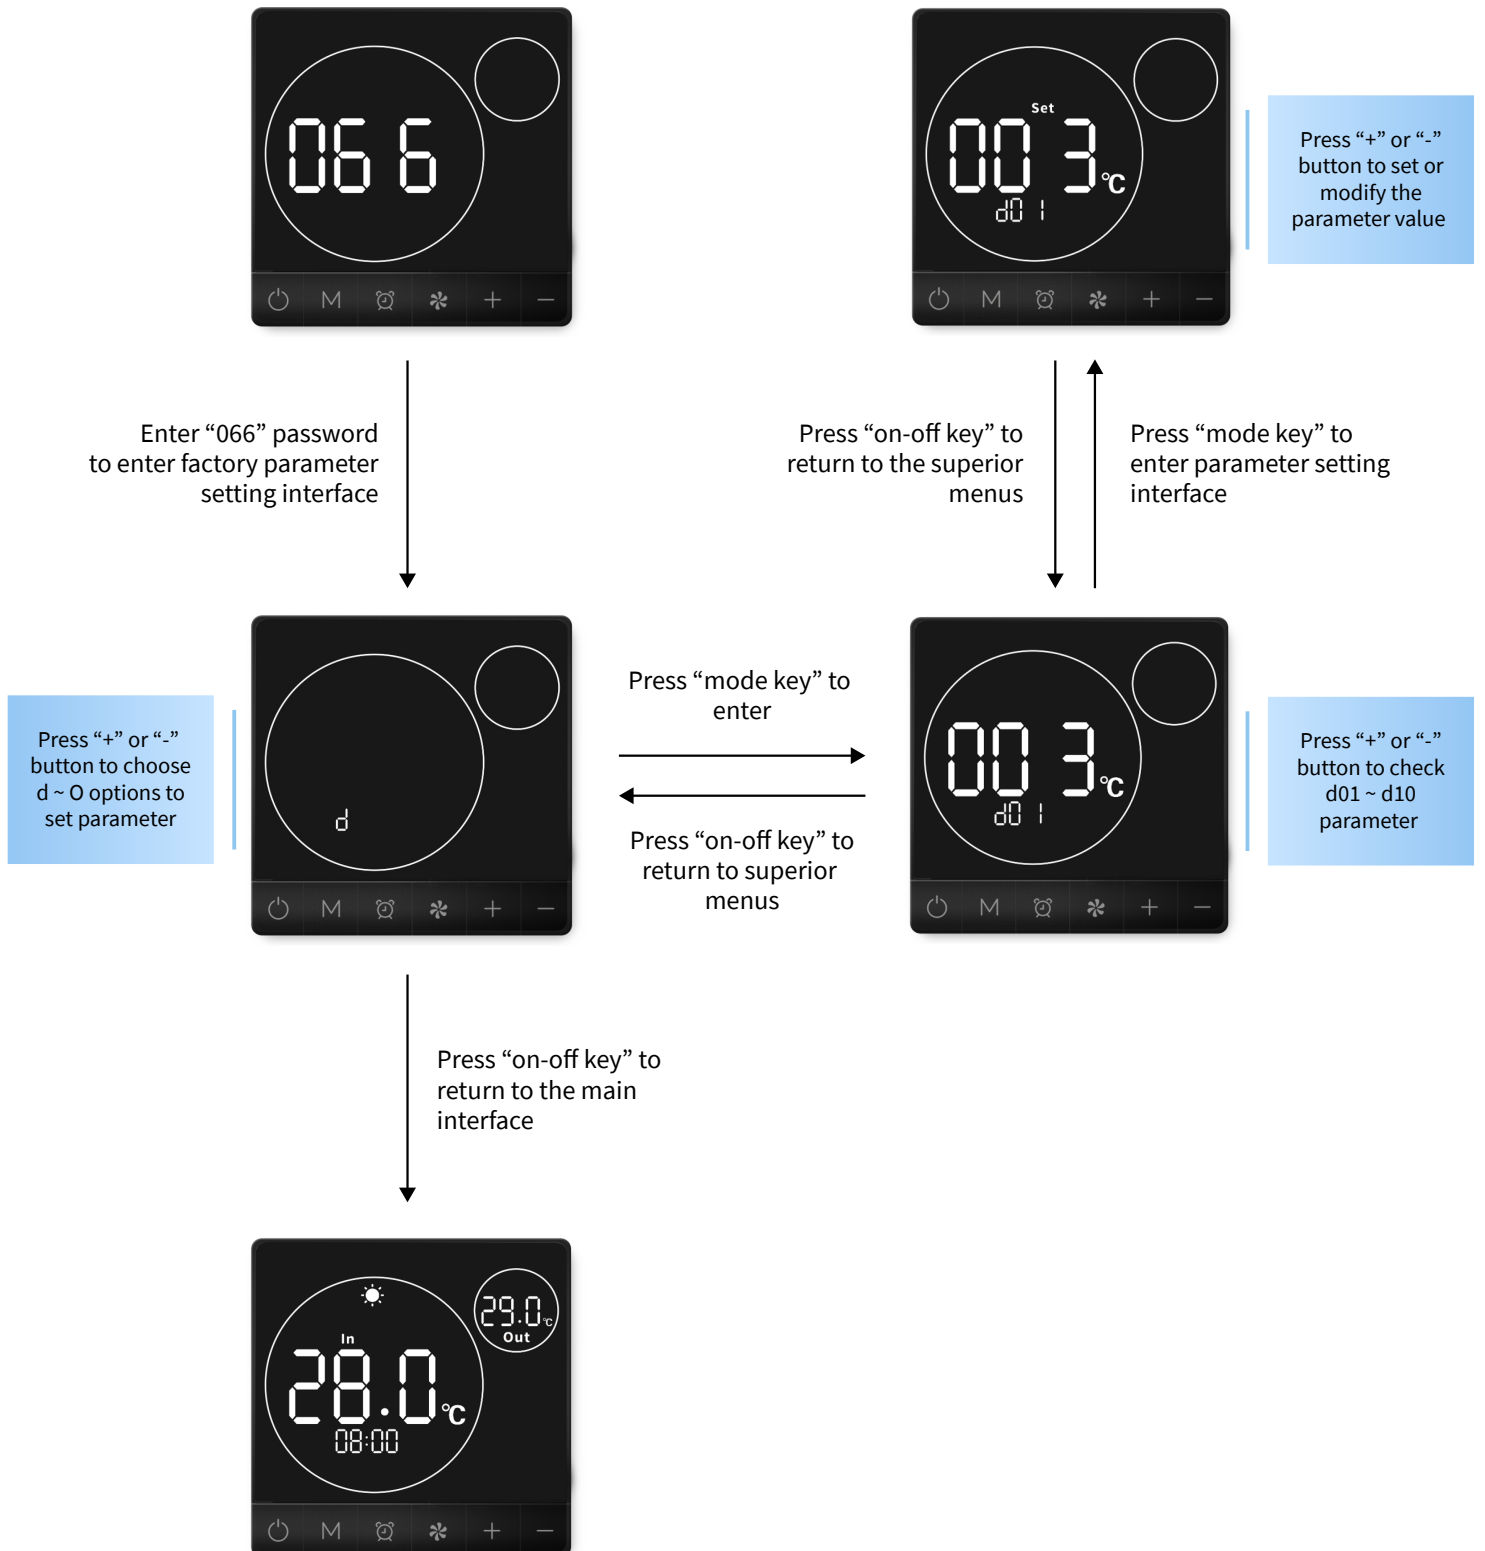


Parameter setting

Upload:
parameter from PCB to Display

Download:
parameter from Display to PCB



input
"855"

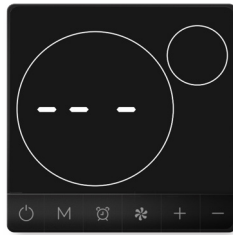

download
click


upload
click hold 2s

try
again


try
again



failed

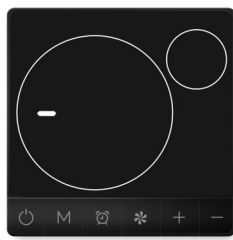

failed

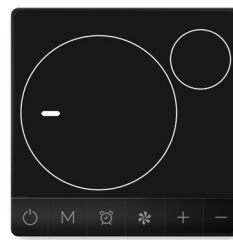


success

success

click or 20s
without action

click or 20s
without action

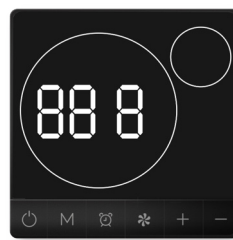

click or 20s
without action

click or 20s
without action

